

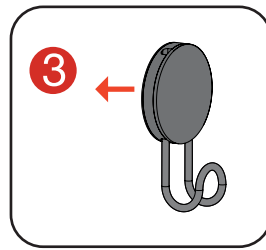
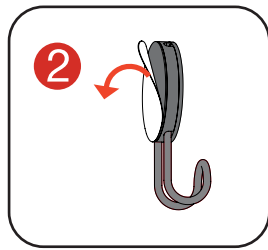
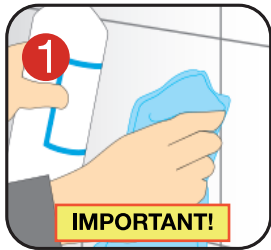
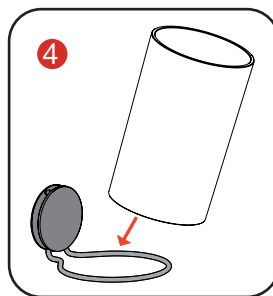


SELF-AD

BK344 BB344
BK355 BB355
BK356 BB356
BK3411 BB3411
BK3464 BB3464

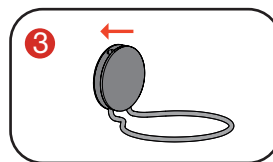

BK333 BB333

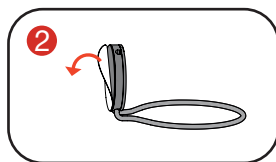

Clean the base thoroughly and let it dry for 10 minutes.
Do not use an oil based cleaner.
Remove the protective film.
Apply the product in the desired location.
Locate the product into position allowing 24 hours before use.
Not recommended for mounting on wet room wallpaper.